



# USER MANUAL



## LOW-SUGAR RICE COOKER (1L/4 cups)

Model No.

LRC-1L-BK

***Your safety is our priority.***

*Please read the instructions carefully before operating the appliance for the first time.*

# THANK YOU FOR YOUR PURCHASE & SUPPORT!

We hope that you can experience the best performance from our products which have been manufactured with excellent quality and state-of-the-art technology to bring out the KITH experience.

Please take some time to read this user manual to retain the appliance at its best performance and to extend the lifespan of the appliance. This manual provides all detailed instructions you may require ensuring safe usage, cleaning, and maintenance.

*Happy cooking!*

---

Please keep this user manual within easy reach for future references.

Doing so will allow you to understand and take advantage of the appliance unique features at any time.

---

With Love,

*Kith*

# CONTENTS

<b>SAFETY GUIDELINES .....</b>	<b>3 – 4</b>
<b>PRODUCT OVERVIEW .....</b>	<b>5 - 6</b>
Specifications .....	5
Structure .....	5
Control Panel .....	6
Display Status .....	6
<b>OPERATING OF APPLIANCES .....</b>	<b>7 – 9</b>
<b>DAILY CLEANING &amp; MAINTENANCE .....</b>	<b>10</b>
<b>FAQS &amp; TROUBLESHOOTING.....</b>	<b>10 – 11</b>
<b>WARRANTY &amp; SERVICE .....</b>	<b>11</b>

## **SAFETY GUIDELINES**

### **GENERAL SAFETY**

---

1. This product is designed for household use only, not for commercial usage.
2. The normal working elevation range of the product is 0-2000 meters.
3. Avoid placing the product in an unbalance surface, keep the product away from humid and other source of fire, heat sources (such as furnaces), preferably a distance of more than 30cm.
4. Because steam and heat can cause damage, discoloration and deformation of walls and furniture, please use more than 8 cm away from walls and furniture.
5. Ensure proper ventilation when storing the product into cabinets and avoid direct sunlight.
6. Do not place the product on soft-surfaces such as carpets, rags & etc.
7. If you intend not to use the appliances for a long time, switch off the product, unplug from the socket and stored in a ventilated and dry place.

### **ELECTRICAL SAFETY**

---

1. Avoid the use of power sources other than 220V AC as it will cause fire.
2. Be sure to use sockets with grounding wires above rated current 10A separately as it will cause fire and other dangers.
3. Do not connect the power cord plugs to appliance with wet hands or when the cord is wet, please ensure that it is fully dry before they can be used.
4. Do not operate the appliance with a damaged cord or plug, or when the appliance malfunctions or has been damaged in any manner. Please return the appliance to Casa (S) Pte Ltd, 15 Kian Teck Crescent 628884.
5. Do not attempt repair, repair should be done only by authorised personnel.
6. Unplug from outlet when not in use, before cleaning, and before servicing. Allow to cool down before putting on, taking off parts, or before cleaning.
7. To protect against fire, electric shock, and personal injury do not sprinkle or immerse cord, plugs, or appliance in any liquids.
8. Do not bend or twist AC power lines, otherwise the cores may be exposed or broken.

### **CHILD SAFETY**

---

1. Never allow children, physically or mentally handicapped, people who lack experience or knowledge to operate, except that the person is responsible for ensuring its replacement and maintenance.
2. Close supervision is necessary when any appliance is used near children. Do not let children use, touch, or play with the machine.
3. Keep parts out of the reach of children.

### **OPERATING SAFETY**

---


1. Do not place the inner pot on other heat sources (e.g., induction cooker, gas cooker)
2. Only the inner pot attached to this product can be used, and cannot be replaced by other inner pots to avoid product failure.
3. Do not start the operation when the inner pot is not in the main machine or when the inner pot is empty.
4. Do not operate the product when the inner pot is not in the machine or when the inner pot is empty.
5. Do not remove the inner pot when the product is working
6. The product will produce high temperature and steam when used. Keep your hands and face away from steam valves to prevent scalds.
7. Do not cover the cloth and other articles on the steam holes in order to avoid deformation of the upper cover and product failure. Do not use this product in high temperature and humidity.
8. Do not wash rice in the inner pot, should be placed in other containers after cleaning and poured into the inner pot of this product, in order to avoid the deformation of the inner pot and scratches on the non-stick coating.
9. If the inner pot is deformed, please do not continue to use it. Contact our after-sales service personnel to purchase new inner pot.
10. Before putting the inner pot into the body, please ensure that there are no rice grains or other food residues sticking at the bottom of the inner pot and on the heating plate. If there is, please remove them first before placing the inner pot into the body.
11. After the inner pot is put in, you may rotate around to ensure that the inner and the heating plate are fully adhered to each other.

# PRODUCT OVERVIEW


## SPECIFICATIONS

<b>Model :</b>	LRC-1L-BK
<b>Product :</b>	Low-Sugar Rice Cooker
<b>Rated Power :</b>	500W
<b>Rated Voltage/Frequency :</b>	220-240V / 50-60Hz
<b>Heating Mode :</b>	Heating plate
<b>Gross Weight :</b>	3.0kg
<b>Net Weight :</b>	2.1kg
<b>Product Dimensions :</b>	222 x 234 x 235mm
<b>Rated Capacity :</b>	1.0L (Normal Rice – 4 cups) (Low-Sugar Rice – 2 cups)
<b>Ideal For :</b>	3 – 4 persons

## STRUCTURE

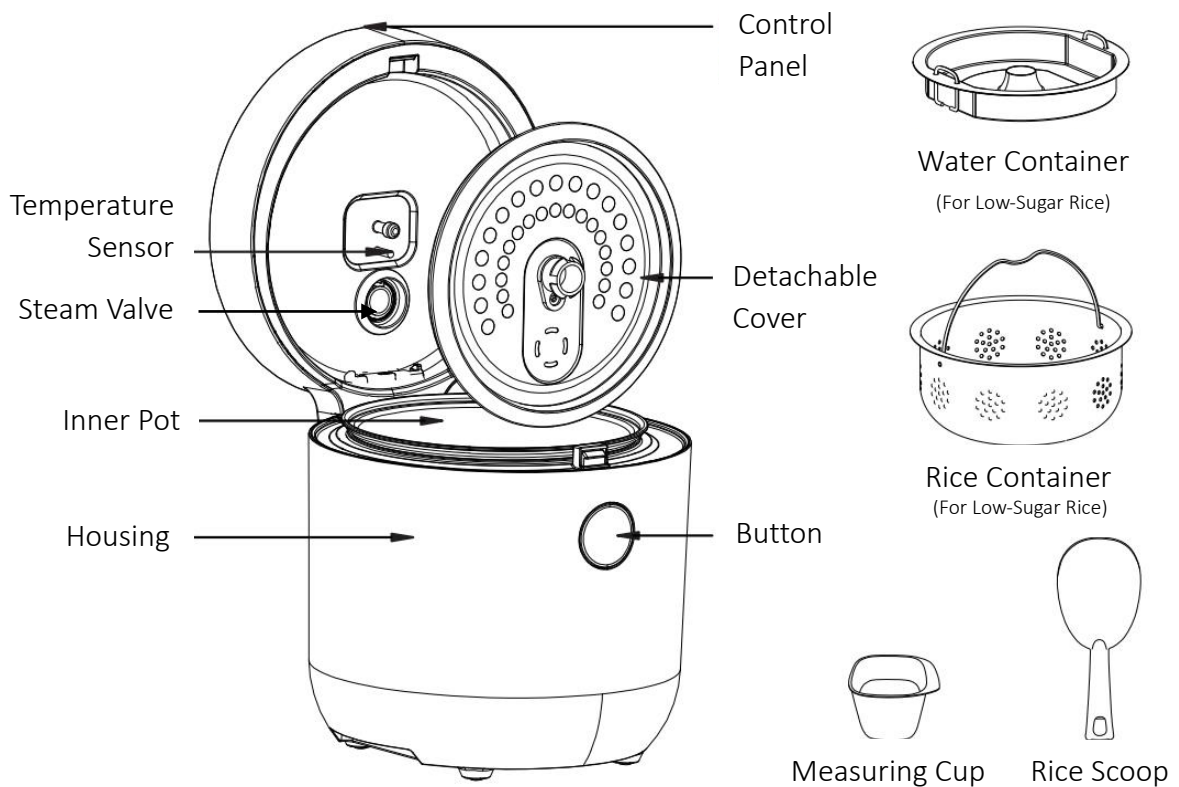

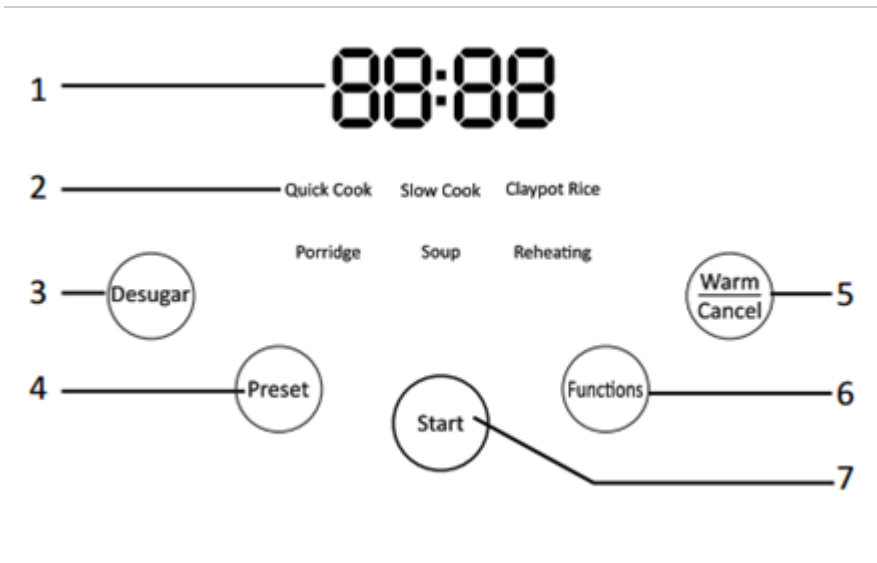

**CONTROL PANEL**



1. LED Timer Display
2. Cooking Menu
3. Desugar Rice (Low-Sugar Rice)
4. Preset
5. Warm / Cancel
6. Functions
7. Start

**DISPLAY STATUS**

1.  – **Standby State** : Appliance is ready to operate.
2.  – **Cooking State** : Appliance is in operation.
3. "00:00" – **Insulation State** : Appliance is keeping the food warm. A timer will appear and progressively count in 1-minute intervals.

## OPERATING OF APPLIANCES

1. Before plugging, please ensure that the outlet voltage at home is in accordance with the product.
2. Before the first use, please take out all the packaging items from the product, clean the Inner Pot, Water Container and Steam Valve with dishwashing liquid and soft sponge.
3. Before putting the inner pot into the body, please ensure that there are no rice grains or other food residues sticking at the bottom of the inner pot and on the heating plate. If there is, please remove them first before placing the inner pot into the body.
4. After the inner pot is put in, you may rotate around to ensure that the inner pot and the heating plate are fully adhered to each other.

## FUNCTIONS

FUNCTION	RICE CAPACITY	DURATION (MINS)**	RICE TO WATER	STEPS
<b>QUICK COOK</b>	4 cups	30 mins to 45 mins	1:1 ratio*	<ol style="list-style-type: none"> <li>1. Press "Functions" button and select "Quick Cook" function.</li> <li>2. Then, press "Start" button and 2 beeps will sound.</li> <li>3. The appliance is in operation when the display shows – <b>00:00</b></li> <li>4. The buzzer will sound 4 times when the function completes and the cooker will automatically enter into "Insulation State" and timer will start.</li> </ol>
<b>SLOW COOK</b>	4 cups	35 mins to 50 mins	1:1 ratio*	<ol style="list-style-type: none"> <li>1. Press "Functions" button and select "Slow Cook" function.</li> <li>2. Then, press "Start" button and 2 beeps will sound.</li> <li>3. The appliance is in operation when the display shows – <b>00:00</b></li> <li>4. The buzzer will sound 4 times when the function completes and the cooker will automatically enter into "Insulation State" and timer will start.</li> </ol>



## LRC-1L-BK

<b>CLAYPOT RICE</b>	4 cups	70 mins	1:1 ratio*	<ol style="list-style-type: none"> <li>1. Press the "Function" button and select "Claypot Rice" function</li> <li>2. Then, press "Start" button and 2 beeps will sound.</li> <li>3. The appliance is in operation when the display shows – <b>0:00</b></li> <li>4. The buzzer will sound 4 times when the function completes and the cooker will automatically enter into "Insulation State" and timer will start.</li> </ol>
<b>PORRIDGE</b>	2 cups	50 mins to 60 mins	1:8 ratio / 1:10 ratio*	<ol style="list-style-type: none"> <li>1. Press the "Functions" button and select the "Porridge" function.</li> <li>2. Then, press "Start" button and 2 beeps will sound.</li> <li>3. The appliance is in operation when the display shows – <b>0:00</b></li> <li>4. The buzzer will sound 4 times when the function completes and the cooker will automatically enter into "Insulation State" and timer will start.</li> </ol>
<b>DESUGAR RICE</b>	2 cups	50 mins to 60 mins	Height of water is 3mm over the rice grain level	<ol style="list-style-type: none"> <li>1. Press the "Functions" button and select the "Desugar" function.</li> <li>2. Then, press "Start" button and 2 beeps will sound.</li> <li>3. The appliance is in operation when the display shows – <b>0:00</b></li> <li>4. The buzzer will sound 4 times when the function completes and the cooker will automatically enter into "Insulation State" and timer will start.</li> </ol>
<b>SOUP</b>	-	120 mins	-	<ol style="list-style-type: none"> <li>1. Press the "Functions" button and select the "Soup" function.</li> <li>2. Then, press "Start" button and 2 beeps will sound.</li> <li>3. The appliance is in operation when the display shows – <b>0:00</b></li> <li>4. The buzzer will sound 4 times when the function completes and the cooker will automatically enter into "Insulation State" and timer will start.</li> </ol>

## LRC-1L-BK

<b>REHEATING</b>	-	25 mins	-	<ol style="list-style-type: none"> <li>1. Press the "Functions" button and select the "Reheating" function.</li> <li>2. Then, press "Start" button and 2 beeps will sound.</li> <li>3. The appliance is in operation when the display shows – <b>0:00</b></li> <li>4. The buzzer will sound 4 times when the function completes and the cooker will automatically enter into "Insulation State" and timer will start.</li> </ol>
<b>PRESET</b> (Adjusting Function's Duration)	-	Up to 24 hours	-	<p><i>The maximum cooking duration allowed is 24 hours. It is recommended not to exceed 12 hours to avoid build-up of odour.</i></p> <ol style="list-style-type: none"> <li>1. Press the "Function" button to select your desired cooking function (e.g., Quick Cook, Porridge, Soup) and press the "Preset" button.</li> <li>2. When the "Preset" indicator is flashing, adjust the duration by pressing "Preset" to increase the duration. If the duration is within 10 hours, the increment is by 0.5 hour. After 10 hours, the increment is by 1.0 hour.</li> <li>3. After adjusting the duration, press the "Start" Button. The appliance is in operation when the display starts to countdown from the adjusted duration.</li> <li>4. The buzzer will sound 4 times when the function completes and the cooker will automatically enter into "Insulation State" and timer will start.</li> </ol>

*\* These are just recommendations rice to water ratio. It can be adjusted accordingly to individual preferences*

*\*\* Duration varies depending on the types of rice, amount of rice and water used. They are just for references.*

## CLEANING AND MAINTENANCE

- Best to clean after every usage to avoid build-up of odour and ensuring that your appliance is at peak performance
- Please ensure that the unit is unplug from power socket and parts are completely cool down to room temperature before attempting to clean and maintain.

### Clean the Inner Pot, Rice & Water Container

- Use hot water, dishwashing liquid and sponge to clean.
- Do not use abrasive or aggressive agents for cleaning.
- If food sticks on the Rice Container/Inner Pot, soak in water for a while before cleaning.

### Maintain Inner Pot, Rice Container & Water Container

- Use only plastic or wooden spoon. Do not use a metal spoon as it will damage the surface.
- To preserve the condition of the non-stick coating as long as possible, it is not recommended to cut food in the inner pot.
- To avoid corrosion, do not pour vinegar into the inner pots and containers.
- Should be cleaned regularly to avoid build-up of odour and clogging of rice.

### Clean and maintain Housing & Other Parts of the cooker

- Clean the central area, detachable cover and exterior of rice cooker with wet cloth.
- Do not immerse the whole appliance in water or wash it under the tap.
- If there is water on the electric heating plate, please wipe it dry with a cloth. If there is burnt rice, you can polish it with steel ball or sandpaper.
- Steam Valve should be cleaned regularly to avoid the odour and clogging of rice.

## FAQS AND TROUBLESHOOTING

Issue	Possible Cause	Remedy
Display does not light up	<ul style="list-style-type: none"> <li>• The board power is not connected</li> </ul>	<ul style="list-style-type: none"> <li>• Check if product is connected to power source.</li> <li>• Contact After-Sales Support</li> </ul>
Electric hot plated is not heated	<ul style="list-style-type: none"> <li>• Board failure</li> <li>• Fuse blown</li> <li>• Electric hot plate failure</li> </ul>	<ul style="list-style-type: none"> <li>• Contact After-Sales Support</li> </ul>

## LRC-1L-BK

Display lights up, Electric hot plate is not heated	<ul style="list-style-type: none"> <li>• Electric hot plate failure</li> <li>• Board failure</li> </ul>	<ul style="list-style-type: none"> <li>• Contact After-Sales Support</li> </ul>
Uncooked rice	<ul style="list-style-type: none"> <li>• The ratio of rice to water is incorrect.</li> <li>• The inner pot is not placed properly</li> <li>• There is something in between the inner pot and the electric hot plate.</li> <li>• Inner pot deformation</li> <li>• Board failure</li> <li>• Sensor failure</li> </ul>	<ul style="list-style-type: none"> <li>• Adjust the ratio of rice to water (Refer to “Functions Table” on Pg. 6)</li> <li>• Rotate around to ensure that the inner pot and the heating plate are fully adhered to each other</li> <li>• Clean up food residue</li> <li>• Contact the company's after-sales staff to purchase a new inner pot</li> <li>• Contact After-Sales Support</li> <li>• Contact After-Sales Support</li> </ul>
Overflow	<ul style="list-style-type: none"> <li>• Too much water</li> </ul>	<ul style="list-style-type: none"> <li>• Use less water</li> <li>• Refer to “Functions Table” on Pg. 6 to</li> </ul>
LED Panel Error Code (E1, E2, E3, E4, E5)	<ul style="list-style-type: none"> <li>• Board failure</li> </ul>	<ul style="list-style-type: none"> <li>• Overheat, please turn off unit and let it cool to room temperature before turning back again</li> <li>• If error code persists, Contact After-Sales Support</li> </ul>

## WARRANTY & SERVICE

If the purchase is made from Casa e-Shop (shop.casa.sg), your warranty will be automatically activated.

Otherwise, please scan the QR Code to register your warranty.



*Casa (S) Pte Ltd. reserves the rights to the final interpretation of the content of this manual. Customer will not be notified in the event of any amendments to the content.*

*The manufacturer and agent decline all responsibilities in the event of damage caused by improper, incorrect or illogical use of the appliance.*

*Contact after-sales service centre when in doubt of the condition of the appliance.*

➤ For Customer Care, please contact -

WhatsApp : +65 9842 6322

Email : kith@casa.com.sg

➤ For After-Sales Support [Singapore], please contact -

Casa (S) Pte Ltd

15, Kian Teck Crescent, Singapore 628884

Telephone : +65 6268 0077

Fax : +65 6898 0510

Email : service@casa.com.sg